



## Handset instructions TDH6

### Operation of the desk

- Press «↑» to move the desk up;
- Press «↓» to move the desk down.

### Setting the memory function

1. Place the desk up or down to the desired position;
2. Press «M» until the display flashes, then press «1» to save position 1;
3. Repeat the procedure to save the other positions. (4 memory positions in total)

*The memory positions are not lost when the power is turned off.*

### Initialization of the system (reset)

1. Press and hold «↑» and «↓» until the frame has reached the lowest position;
2. Initialization is complete when you hear a beep.

### CM or INCH

1. Press «1», «2» & «M» together for 5 seconds;
2. Then «C1» will flash on the display;
3. Press «1» for CM or press «2» for INCH.

### Caution:

- This product must comply with the technical parameters (see label control box);
- Keep the product away from water and corrosion-resistant gas;
- Is there a problem with the product? Please contact the point of sale.

---

### Locking the minimum height of the desk

1. Place the desk at the desired minimum height;
2. Press «↑» & «↓» at the same time;
3. Then press and hold «↓». Then press «↑» three times with another finger;
4. Finally there will be a beep, this means that the minimum height is set.

The minimum height lock can be removed by repeating the above steps.

### Locking the maximum height of the desk

1. Place the desk at the desired maximum height;
2. Press «↑» & «↓» at the same time;
3. Then press and hold «↑». Then press «↓» three times with another finger;
4. Finally there will be a beep, this means that the maximum height is set.

The maximum height lock can be removed by repeating the above steps.

### Caution:

- *This product must comply with the technical parameters (see label control box);*
- *Keep the product away from water and corrosion-resistant gas;*
- *Is there a problem with the product? Please contact the point of sale.*