


PVC Crash Doors



INSTALLATION GUIDE

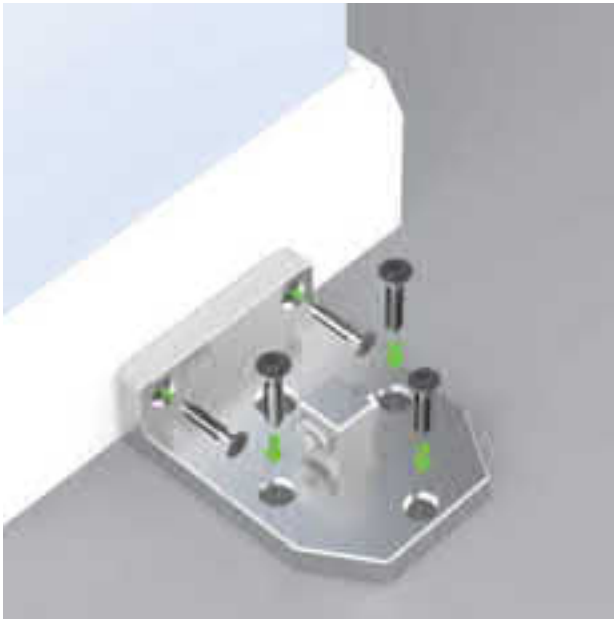


STEP 1

Align the baseplate with the middle of the doorframe and flush against the wall/ surface. Fix using appropriate fittings.




STEP 2

After placing the washer mount the door onto the base plate.

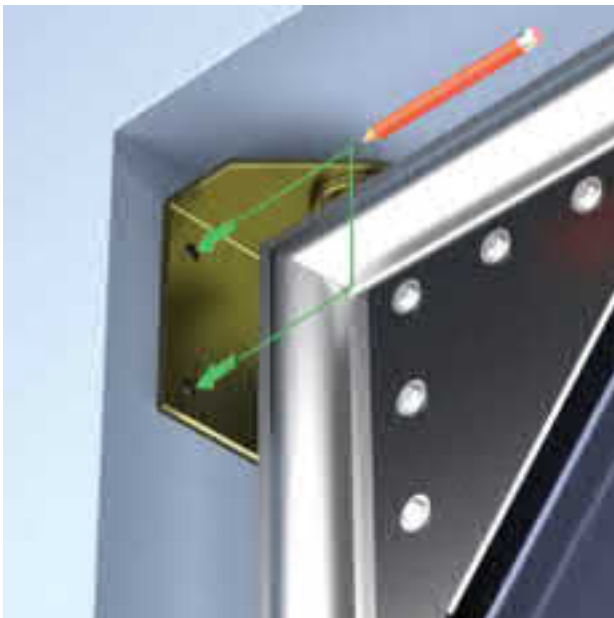

STEP 3

Ensuring the door is straight by using a spirit level, position the top bracket on the door with the hinge pin in place. Mark the mounting point using the top bracket as a guide.

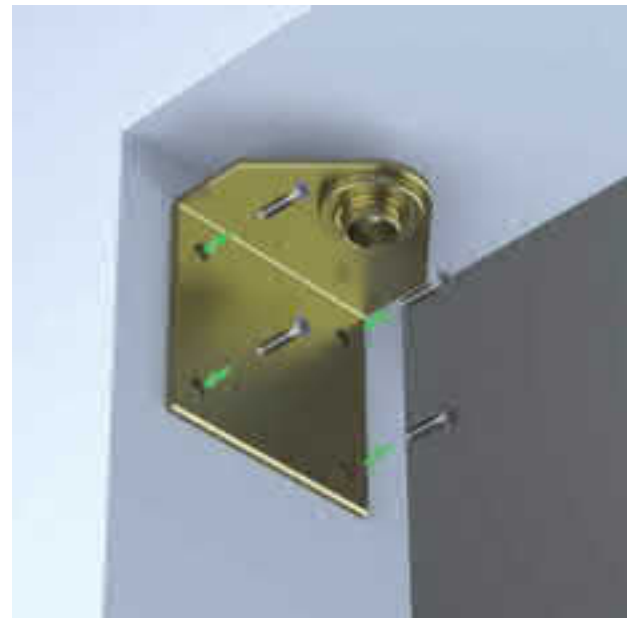

STEP 4

Remove the door and fix the top bracket using appropriate fitting.



STEP 5

Align the baseplate with the middle of the doorframe and flush against the wall/ surface. Fix using appropriate fittings.




TENSIONING THE HINGEPIN STEP 1

Insert a 6.5mm sized tensioning bar / screwdriver into the location hole located furthest to the left of the door hinge and wind back slightly anti-clockwise




STEP 2

Remove the tensioning pin from existing hole location.

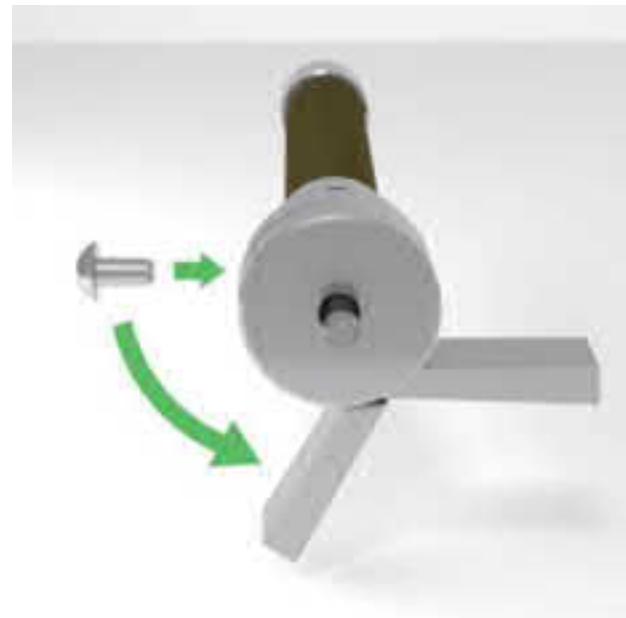

STEP 3

Wind the bar further anti-clockwise, ideally a further 1 or 2 location hole places, and re-insert the tensioning pin to the furthest left hole. Release the tensioning bar slowly until the tensioning pin takes the pressure

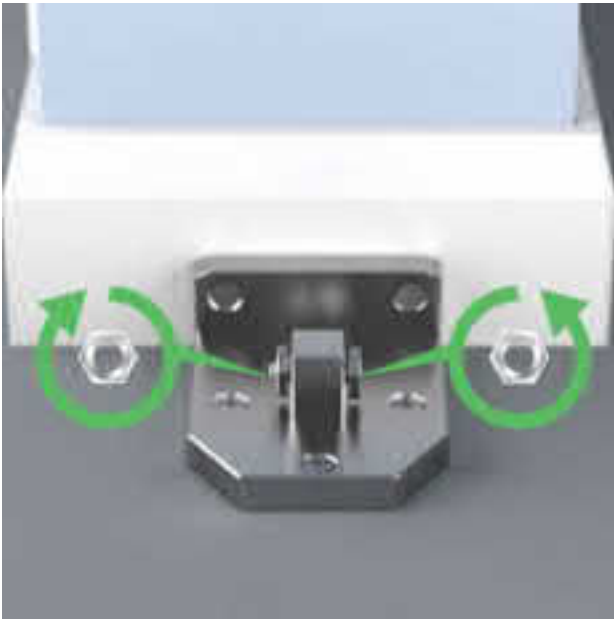

STEP 5

Remove tensioning bar and test the door action, ensuring it returns as desired from both left and right directions. To centralise the door closing alter the adjusters on the base plate